


PACIFIC SCALES

6 CHANNEL TONE LINK METER

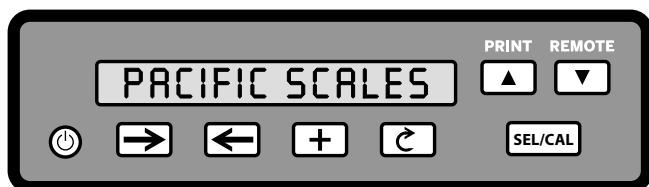

OPERATION AND SETUP

OPERATION

To display the weight reading of one channel press \leftarrow or \rightarrow to select a channel. To show the sum of 2 or more channels press \leftarrow or \rightarrow to select first channel then press $+$ to add more channels.

Press \rightarrow to cycle through the channels. The wireless remote display is activated by pressing the REMOTE button. Each press gives 30 minutes of operation to a maximum of 90 minutes.

CALIBRATION

To adjust Tare or Span push and hold SEL/CAL until meter enters calibrate mode. Pushing \rightarrow toggles between TARE and SPAN, use up, down arrow buttons to adjust. While in calibrate mode the POWER button acts as a TEST button, giving a test number relative to channel calibration. Always adjust TARE when empty and SPAN when loaded. To exit calibrate mode push the SEL/CAL button.

SETUP



Push and hold the SEL/CAL while turning meter on to enter SETUP, the various meter parameters that can be set will cycle through, press SEL/CAL to change a parameter or exit SETUP.

SYSTEM CHECKS


If the meter is not reading as expected or the message "NO SIGNAL" appears during calibration a check of system wiring should be made.

Tone Links have 2 lights, a RED power light and a GREEN test light. The RED power light should be always on, if not a check of the WHITE (Tone Link earth) and BLUE (Tone Link 12v power) circuits should be made. The GREEN test light should be on whenever the TEST button is pressed or while the meter is in SETUP mode, if not a check of the BLACK (signal) wire should be done. The BLUE and WHITE wires are common to all Tone Links, each Tone Link has an individual BLACK wire.

TONE LINK CONNECTIONS

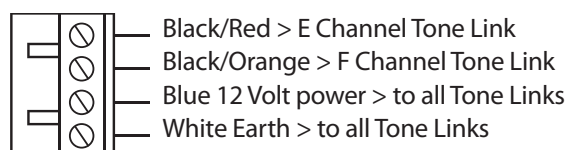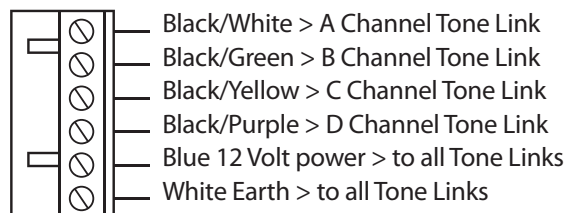

DATA CONNECTIONS

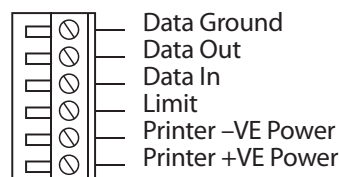

For more detailed information contact

PACIFIC SCALES

www.pacificscales.com.au

info@pacificscales.com.au

Ph 03 62653844